



3P74B484-3
The two-dimensional bar code is for
a manufacturing code.

SAFETY PRECAUTIONS

- Read the precautions in this manual carefully before operating the unit.
- This appliance is filled with R32.
- After reading, keep this manual in a convenient place so that you can refer to it whenever necessary. If the equipment is transferred to a new user, be sure also to hand over the manual.
- Keep this manual where the operator can easily find them.
- Read all safety precautions in this manual carefully before operating the unit.
- For safety reasons the operator must read the following cautions carefully. The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.

WARNING
Failure to follow these instructions properly may result in personal injury or loss of life.

CAUTION
Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

- Never attempt.
- Be sure to establish an earth connection.
- Never wet the air conditioner nor the remote controller with wet hands.
- Be sure to follow the instructions.
- Never wet the air conditioner nor the remote controller with water.

- WARNING**
- The appliance must be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
 - Do not pierce or burn.
 - Be aware that refrigerants may not contain an odour.
 - In order to avoid fire, explosion or injury, do not operate the unit when harmful, among which flammable or corrosive gases, are detected near the unit.
 - It is not good for health to expose your body to the air flow for a long time.
 - Do not place objects, including rods, your fingers, etc., in the air inlet or outlet. Product malfunctioning, product or injury damage may result due to contact with the air conditioner's high-speed fan blades.
 - Do not attempt to repair, dismantle, reinstall or modify the air conditioner yourself as this may result in water leakage, electric shocks or fire hazards.
 - Do not attempt to install or repair the air conditioner yourself. Improper workmanship may result in water leakage, electric shocks or fire hazards. Please contact your local dealer or qualified personnel for installation and maintenance work.
 - Do not use flammable spray near the air conditioner, or otherwise fire may result.
 - Do not place flammable items, such as spray cans, within 1 meter of the air outlet. The spray cans may explode as a result of hot air from the indoor or outdoor units.
 - When the air conditioner is malfunctioning (giving off a burning odour, etc.) turn off power to the unit and contact your local dealer. Continued operation under such circumstances may result in a failure, electric shocks or fire hazards.
 - Do not use a refrigerant other than the one indicated on the outdoor unit (R32) when installing, moving or repairing. Using other refrigerant may cause trouble or damage to the unit, and personal injury.

- The refrigerant used in the air conditioner is safe. Although leaks should not occur, if for some reason any refrigerant happens to leak into the room, make sure it does not come in contact with any flame as of gas heaters, kerosene heater or gas range.
- If the air conditioner is not cooling properly, the refrigerant may be leaking, so call your dealer.
- When carrying out repairs accompanying adding refrigerant, check the content of the repairs with our service staff.
- Do not attempt to install the air conditioner by yourself. Incorrect work will result in water leakage, electric shocks or fire. For installation, consult the dealer or a qualified technician.
- In order to avoid electric shock, fire or injury, if you detect any abnormality such as smell of fire, stop the operation and turn off the breaker. And call your dealer for instructions.
- Do not wash the air conditioner with water, as this may result in electric shocks or fire.
- Do not place water containers (flower etc.) above the unit, as this may result in electric shocks or fire hazards.
- Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks or fire.
- Only connect the air conditioner to the specified power supply circuit. Power supplies other than the one specified may result in electric shocks, overheating and fires.
- Be sure to earth the unit. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks.

CAUTION

- Be aware that prolonged, direct exposure to cool or warm air from the air conditioner, or to air that is too cool or too warm can be harmful to your physical condition and health.
- Do not use the air conditioner for purposes other than those for which it is intended. Do not use the air conditioner for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned.
- Do not expose plants or animals directly to airflow from the unit as this may cause adverse effects.
- Do not place appliances that produce naked flames in places exposed to the air flow from the unit as this may impair combustion of the burner.
- Do not block air inlets or outlets. Impaired air flow may result in inefficient performance or trouble.
- Beware of fire in case of refrigerant leakage. If the air conditioner is not operating correctly, i.e. not generating cool or warm air, refrigerant leakage could be the cause. Consult your dealer for assistance. The refrigerant within the air conditioner is safe and normally does not leak. However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas. Do not linger use air conditioner until a qualified service person confirms that the leakage has been repaired.
- Do not sit or place objects on the outdoor unit. Falling yourself or falling objects could cause injury.
- Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units. Under certain conditions, condensation on the main unit or refrigerant pipes, air filter or drain blocks may cause dripping, resulting in fouling or failure of the object concerned.
- After prolonged use, check the unit stand and its mounts for damage. If left in a damaged condition, the unit may fall and cause injury.
- To avoid injury, do not touch the air inlet or aluminium fins of the indoor or outdoor units.
- The appliance is not intended for use by unattended young children or infirm persons. Impairment of bodily functions and harm to health may result.
- Children should be supervised to ensure that they do not play with the unit or its remote controller. Accidental operation by a child may result in impairment of bodily functions and harm health.
- Do not sit on the outdoor unit, put things on the unit, or pull the unit. Doing so may cause accidents, such as falling or toppling down, thus resulting in injury, product malfunctioning, or product damage.
- Do not give impact to the indoor and outdoor units, or otherwise product damage may result.
- Do not place objects around the indoor unit. Doing so may have an adverse influence on the performance, product quality, and life of the air conditioner.
- Be careful not to let pets urinate on the air conditioner. Urination on the air conditioner may result in electric shocks or fire.
- Do not sit or hang on the up and down panel. The up and down panel may fall, and injury or property damage may result.
- Do not sway the up and down panel. The up and down panel may hit people or objects, and injury or property damage may result.
- Do not let children play around the up and down panel. Injury or property damage may result.
- Do not put the wires. The wires may be broken and the up and down panel may fall, and injury or property damage may result.
- Do not locate obstacles in the up and down route. The up and down panel may fall, and injury or property damage may result.
- Do not bend or damage the wires. The wires may be broken and the up and down panel may fall, and injury or property damage may result.
- Do not put objects on the up and down panel, or otherwise product malfunctioning may result.
- Do not use an unstable stand at the time of operating or maintaining the air conditioner, or otherwise you may topple over or injury yourself.
- Locate the remote controller in places out of reach of children. The wrong operation of the remote controller may result in injury.
- To avoid oxygen depletion, ensure that the room is adequately ventilated if equipment such as a burner is used together with the air conditioner.
- Before cleaning, be sure to stop unit operation, turn the breaker off or remove the power cord.
- Otherwise, an electric shock and injury may result.
- Do not connect the air conditioner to a power supply different from the one as specified. It may cause trouble or fire.
- Depending on the environment, an earth leakage breaker must be installed. Lack of an earth leakage breaker may result in electric shocks.
- Arrange the drain hose to ensure smooth drainage. Incomplete drainage may cause wetting of the building, furniture etc.
- Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit. Leaves are a habitat for small animals which can enter the unit.
- Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.

- To avoid electric shocks, do not operate with wet hands.
- Do not wash the indoor unit with excessive water, only use a slightly wet cloth.
- Do not place things such as vessels containing water or anything else on top of the unit. Water may penetrate into the unit and degrade electrical insulations, resulting in an electric shock.

Installation site.

- To install the air conditioner in the following types of environments, consult the dealer.
 - Places with an oily ambient or where steam or soot occurs.
 - Salty environment such as coastal areas.
 - Places where sulfur gas occurs such as hot springs.
 - Places where snow may block the outdoor unit.
 - The indoor unit is at least 1m away from any television or radio set (unit may cause interference with the picture or sound).
 - The drain from the outdoor unit must be discharged to a place of good drainage.

Consider nuisance to your neighbours from noises.

- Also pay attention to operating noise.
 - Select the following kinds of location:
 - A. A place that can sufficiently withstand the weight of the air conditioner with less running noises and vibrations.
 - B. A place where warm airflow from the air outlet of the outdoor unit and operating noise do not cause a nuisance to neighbours.
 - Be sure there are no obstructions near the air outlet of the outdoor unit.
 - Obstructions may result in poor performance and increased operating noise. If abnormal noise occur, ask your dealer for advice.

Electrical work.

- For power supply, be sure to use a separate power circuit dedicated to the air conditioner.

System relocation.

- Consult your Daikin dealer about remodeling and relocation.

REMOTE CONTROLLER OVERVIEW

Display (LCD)
• Display the current settings. (This illustration shows the full display of the LCD panel, including functions for applicable remote controller models only.)

• a Battery indication will be shown once battery low.

ON/OFF Button (Pink)
• Start / Stop the operation.

FAN Button
• Change the operating fan speed.

ECONO Button
• Enable / Disable ECONO function.

STREAMER Button
• Enable / Disable STREAMER function.

SLEEP Button
• Enable / Disable SLEEP function.

ON Timer Button
• Enable / Disable and change ON Timer setting.

OFF Timer Button
• Enable / Disable and change OFF Timer setting.

IR Signal Transmitter
• To transmit signal, aim the transmitter to the indoor unit. Note that in the condition where there is an obstacle that blocks between the transmitter and the indoor unit, signal transmission might not be successful.

Temperature Setting Button
• Increase / Decrease the temperature setting.

MODE Button
• Change between the available operating modes.

3D AIR Button
• Enable / Disable 3D AIR function.

LEFT-RIGHT SWING Button
• Direct the air flow in left-right direction.

UP-DOWN SWING Button
• Direct the air flow in up-down direction.

POWERFUL Button
• Enable / Disable POWERFUL function.

CLOCK Button
• Change RTC setting.

LEFT & RIGHT Adjustment Button
• Forward / Backward the settings in RTC, ON Timer and OFF Timer setting mode.

PREPARATION BEFORE OPERATION

Accessories
The following accessories are included.

Drillawl screw, Battery, Remote Controller Holder

To set the batteries

- Release the battery cover at the back of the remote controller.
- Insert two dry batteries (LR03 AAA).
- Set the battery cover as before.

Disposal Requirements
The batteries supplied with the controller are marked with this symbol. This means that the batteries shall not be treated with untreated household waste. If a chemical symbol is printed beneath the symbol, this chemical symbol means that the battery contains a heavy metal above a certain concentration. Please dispose of used batteries in accordance with local regulations.

Waste batteries must be treated at a specialized treatment facility for re-use. By ensuring correct disposal, you will help to prevent pollution of the environment and human health. Please contact your local authority for more information.

About batteries

- Remove the batteries from the remote controller if the air conditioner will not be used for an extended period of time.
- When replacing the batteries, it is advised to replace the both batteries together with batteries of the same type.
- Batteries should be replaced once a year. However, if the display of remote controller started to fade or there is a noticeable degradation in performance, replace both batteries with new AA/LR03 batteries.
- The attached batteries are provided for initial use of the air conditioner. The usage period of these batteries depends on the manufactured date of the air conditioner.

BEFORE OPERATION

- To operate the remote controller**
- Aim the transmitter of the remote controller at the receiver of the indoor unit.
 - Ensure there is no blockage such as curtain between the indoor unit and the remote controller; signal transmission will be unsuccessful.
- To fix the remote controller holder on the wall**
- Choose a location where signal is able to reach the unit.
 - Fix the holder onto a wall, a pillar or etc with the screws supplied with the holder.
 - Place the remote controller on the holder.

- About remote controller**
- Do not drop nor wet the remote controller.
 - Never expose the remote controller under direct sunlight.
 - Dust on the transmitter lens cover will reduce the sensitivity.
 - Signal communication may be affected if the air conditioner is being installed near an electronic-starter-type fluorescent lamp (such as inverter-type lamp) in the room.

- To set the clock**
- Press **CLOCK** button.
 - Press **◀▶** to set the clock to present time.
 - Press **STOP** button.
- For example, present time is 8 o'clock in the morning, **0800** will be displayed.

WIRELESS CONNECTION SETTING

The customer is responsible for providing the following:

- Smartphone or tablet PC (Supported OS: Android 4.1.2 - 9.0 ; iOS 10.0 - 12.1)
- Internet line and communicating device (Modem/router or similar device)
- Wireless LAN access point
- Application name: [DAIKIN Mobile Controller] (free)

Installation method for the DAIKIN Mobile Controller application

For Android Phones
(1) Open the [Google Play].
(2) Search using the application name: [DAIKIN Mobile Controller].
(3) Follow the directions on the screen to install.

For iPhones (App Store)
(1) Open the [App Store].
(2) Search using the application name: [DAIKIN Mobile Controller].
(3) Follow the directions on the screen to install.

Simple Wireless Connection Setting

- The setup is simple if there is a [WPS] button on the router (Wireless LAN access point).

- Check that the [RUN] lamp is blinking.
- Push the [WPS] button on the router (Wireless LAN access point).
- Push the [SETUP] button on the Wireless LAN connecting adapter for approximately 2 seconds.
- After connecting the Wireless LAN connecting adapter to the router, the user will be able to detect the Wireless LAN connecting adapter via the DAIKIN Mobile Controller application.

Troubleshooting

The following table provides brief descriptions of how to handle trouble or uncertainties when you install the Wireless LAN connecting adapter and make connection settings.

Fault	Causes / Action
1. None of the LEDs light.	<ul style="list-style-type: none"> Try to operate the unit with the infrared remote controller. Turn off the air conditioner and restart it. Make sure the LEDs are not disabled in the application. Check the installation. Check that the power of the Wireless LAN connecting adapter is ON by pressing the [POWER] button on the adapter.
2. The Wireless LAN connecting adapter is not visible on the unit overview screen (Home screen) after the Wireless LAN connecting adapter has been configured.	<ul style="list-style-type: none"> Check that the power is on. Check that the [RUN] lamp is lit. If the [RUN] lamp is blinking, wait to connect the Wireless LAN connecting adapter to the Wireless network. Make sure the Wireless LAN connecting adapter is close enough to the router (Wireless LAN access point). If the [RUN] lamp is lit, make sure that the smartphone or tablet is connected to the same Wireless LAN network as the Wireless LAN connecting adapter.

1 COOL ■ DRY ■ FAN ■ HEAT ■ AUTO OPERATION

To start operation

- Press **ON** button to start the unit operation.
- Press **MODE** button to choose the desired operation mode.

Each pressing on the button advances the available operating mode in sequence below:

COOL FAN HEAT AUTO DRY

To stop operation

- Press **STOP** button to stop the unit operation.

Notes

Operating Mode	Description
COOL	The air conditioner cools down the room by releasing the heat to outdoor unit.
DRY	The air conditioner operates to control the room humidity by regulating the indoor unit fan speed. Therefore, manual adjustment of the fan speed in DRY mode is not available.
FAN	The air conditioner indoor unit will run in fan only.
HEAT	The air conditioner heats up a room to the temperature setpoint.
AUTO	The air conditioner cools down or heats up a room to the temperature setpoint. It automatically switches between cooling and heating if necessary.

Notes on the operating conditions

- The air conditioner will always consume a small amount of electricity even in standby mode.
- Ensure that the power supply / breaker is switch off if the air conditioner is not going to be used for an extended period of time.

2 ADJUSTING THE AIRFLOW DIRECTION

To change the air flow in up-down direction

- Press **UP/DN** button.

Each pressing on the button advances the step swing in sequence below:

AUTO STEP SWING

Swing will move within the maximum and minimum movable range in up-down direction once AUTO SWING is selected.

To change the air flow in left-right direction

- Press **LR** button.

Swing will move within the maximum and minimum movable range in left-right direction once AUTO SWING is selected.

Notes

- Always use the remote controller to adjust the swing angle. Any manual adjustment will break the mechanism of the swing control.
- Cooling and heating effect at different step angle will be affected by different air flow rate.

3 3D AIR OPERATION

To start 3D AIR operation

- Press **3D** button.

To cancel 3D AIR operation

- Press **3D** button.

Notes on 3D AIR operation

- 3D AIR operation can also be started by setting the LEFT-RIGHT SWING and UP-DOWN SWING individually to AUTO SWING.
- 3D AIR operation will be stopped if swing in up-down and/or left-right direction is adjusted.

4 ECONO OPERATION

To start ECONO operation

- Press **ECONO** button.

To cancel ECONO operation

- Press **ECONO** button.

Notes on ECONO operation

- ECONO operation adjust the operating condition to energy saving level by limiting the maximum power output of the air conditioner.
- ECONO operation will be stopped if POWERFUL operation is activated. Priority will be given to the last button pressed.
- ECONO only available in COOL, HEAT, DRY and AUTO mode.
- Pressing **ON** causes the setting to be cancelled and **ECONO** disappears from the LCD.

4 STREAMER OPERATION

To start the STREAMER operation

- Press **STREAMER** button.

To cancel STREAMER operation

- Press **STREAMER** button.

Notes on STREAMER operation

- While the streamer is operating, the streamer unit will emit a hissing sound when conducting streamer discharge.
- Always use the remote controller to adjust the swing angle. Any manual adjustment will break the mechanism of the swing control.
- Cooling and heating effect at different step angle will be affected by different air flow rate.

5 SLEEP OPERATION

To start SLEEP operation

- Press **SLEEP** button.

To cancel SLEEP operation

- Press **SLEEP** button.

Notes on SLEEP operation

- SLEEP operation automatically adjust Set temperature to the set temperature of the air conditioner to provide a comfort sleeping environment.
- SLEEP operation only available in COOL and HEAT mode.
- Pressing **ON** causes the setting to be cancelled and **SLEEP** disappears from the LCD.

6 POWERFUL OPERATION

To start POWERFUL operation

- Press **POWERFUL** button.

To cancel POWERFUL operation

- Press **POWERFUL** button.

Notes on POWERFUL operation

- POWERFUL operation will be stopped if fan speed is adjusted or QUIET / ECONO operation is activated. Priority will be given to the last button pressed.
- In condition where POWERFUL operation is started, it will temporarily override the operation of other functions for 20 minutes.
- Pressing **ON** causes the setting to be cancelled and **POWERFUL** disappears from the LCD.
- Indoor unit operating sound will appear to be louder during POWERFUL operation.
- POWERFUL operation will not increase the capacity of air conditioner if the air conditioner is already operating in its maximum capacity.

7 TIMER OPERATION

To use OFF TIMER operation

- Ensure the clock setting is set to present time (refer to method to set the clock under preparation before operation).
- Press **OFF TIMER** button.
- Press **▶◀** to set the off timer setting.
- Press **STOP** button again.

To cancel OFF TIMER operation

- Press **OFF TIMER** button to cancel the OFF TIMER.

To use ON TIMER operation

- Ensure the clock setting is set to present time (refer to method to set the clock under preparation before operation).
- Press **ON TIMER** button.
- Press **▶◀** to set the on timer setting.
- Press **STOP** button again.

To cancel ON TIMER operation

- Press **ON TIMER** button to cancel the ON TIMER.

8 FAULT DIAGNOSIS

To perform error code diagnosis

- Press and hold **ERROR** or **ERROR** button for 5 seconds.
- Press **▶◀** to check on the error code.
- Press and hold **ERROR** or **ERROR** button for 5 seconds.

Notes

- A short "beep" and two consecutive "beep" acknowledgement from the indoor unit indicates a non-correspondence error code.
- User shall not attempt to repair or modify the air conditioner as any incorrect work may result in electric shock or fire.
- Consult the service personnel in case the air conditioner is found to be faulty.

Error code definition

Error Code	Meaning
00	Normal
A1	Indoor PCB error
A3	Drain pump abnormal
A5	Anti-freeze
A6	Indoor fan motor abnormal
AH	Electrical air cleaner abnormal
C4	Indoor heat exchanger (1) thermostat short / open
C5	Indoor heat exchanger (2) thermostat short / open
C7	Lower limit switch error
C9	Indoor room thermostat short / open
CH	Malfunction of humidity sensor system
E1	Gas leak
E3	Outdoor PCB error
E4	High pressure protection
E5	Low pressure protection
E6	Compressor motor lock / compressor overload
E7	Compressor start-up error
E8	Outdoor DC fan motor lock
E9	AC input overcurrent
EA	EXV error
EB	4 way valve error
EC	Discharge pipe overheat
ED	Abnormal high pressure
FE	Heat exchanger overheat
H0	Compressor sensor system error
H3	High pressure switch error
H6	Compressor feedback detection error
H7	Fan motor overload / overcurrent / sensor abnormal
H8	AC current sensor error
H9	Outdoor air thermostat short / open
J1	Pressure sensor error
J2	Compressor discharge pipe thermostat short / open / misplaced
J5	Suction pipe thermostat short / open
J6	Outdoor heat exchanger thermostat short / open
J7	Liquid pipe thermostat short / open
J8	Subcooling heat exchanger thermostat short / open
J9	Gas pipe thermostat short / open
L1	Inverter outdoor PCB error
L3	Outdoor control box overheat
L4	Heat sink overheat
L5	IPM error / IGBT error
L6	Inverter compressor overcurrent
L9	Compressor overcurrent prevention
LC	Communication error (outdoor control PCB and inverter PCB)
LP	Open phase or voltage unbalance
P4	Heat sink thermostat short / open
P1	Capacity setting error
U0	Insufficient gas
U2	DC voltage out of range
U3	Transmission error
U4	Communication error
U7	Communication error (outdoor control PCB and IPM PCB)
UA	Installation error (wrong combination of ID and OD units) / wrong or defective ID / OD PCB installed
UF	Piping & wiring installation mismatch / wrong wiring / insufficient gas

CARE AND CLEANING

CAUTION

- Before cleaning, be sure to stop the operation and turn off the circuit breaker.
- Do not touch the aluminium fins of the indoor unit. If you touch those parts, this may cause an injury.
- Avoid direct contact of any coil treatment cleaners on plastic part. This may cause plastic part to deform as a result of chemical reaction.

Quick reference

Cleaning parts

Front panel: Wipe it with a soft damp cloth. Only neutral detergent may be used. (If dirty)

Air filter: Vacuum dust or wash the filter. (Once every 2 weeks)

Indoor unit, outdoor unit and remote controller: Wipe them with a soft cloth. (If dirty)

Notes

- For cleaning, do not use any of the following:
 - Water hotter than 40°C/104°F.
 - Volatile liquid such as benzene, gasoline and thinner.
 - Polishing compounds.
 - Rough materials such as a scrubbing brush.

2 AIR FILTER

1. Pull out the air filters.

Water hotter than 40°C/104°F.

Volatile liquid such as benzene, gasoline and thinner.

Polishing compounds.

Rough materials such as a scrubbing brush.

2. Wash the air filters with water or clean them with vacuum cleaner.

It is recommended to clean the air filters every 2 weeks.

3. Set the filters as they were and close the front panel slowly.

Press the front panel at both sides and the center.

CAUTION

- Do not touch the aluminium fins by bare hand at the time of dismounting or mounting the filter.

HOW TO OPEN FRONT PANEL

- Open the front panel.
 - Hold the panel at the recesses on the main unit (2 recesses on right and left sides) and lift it until it stops.
- Remove the front panel.
 - While lifting the front panel further, pull out the rotating shaft and pull it to the front side to remove it.
- Attach the front panel.
 - Align the right and left rotating shafts of the front panel with the grooves and push them all the way in.
 - Gently close the front panel. (Push both ends and the center on the front panel.)

CAUTION

- Do not touch the metal parts of the indoor unit. It may cause an injury.
- When removing or attaching the front panel, support the panel securely with hand to prevent it from falling.
- For cleaning, do not use hot water above 40°C, benzene, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes, nor other hard stuff.
- After cleaning, make sure that the front panel is securely fixed.

When the Unit Is Not To Be Used For An Extended Long Period Of Time

Operate the unit for 1 hour with the following setting:
Operating mode: cool
Temperature: 30°C/86°F

Remove the power plug if you are using an extended electric circuit for your unit, cut off the circuit.
Remove the batteries in the remote control.

TROUBLESHOOTING

For any enquiries on spare parts, please contact your authorized dealer. If any malfunction of the air conditioner unit is noted, immediately switch off the power supply to the unit. Check the following fault conditions and causes for some simple troubleshooting tips.

Fault	Causes / Action
1. The compressor does not operate 3 minutes after the air conditioner unit is started.	<ul style="list-style-type: none"> Protection against frequent starting. Wait for 3 to 4 minutes for the compressor to start operating.
2. The air conditioner unit does not operate.	<ul style="list-style-type: none"> Power failure, or the fuse need to be replaced. The power plug is disconnected. It is possible that your delay timer has been set incorrectly. If the fault persists after all these verifications, please contact the air conditioner unit installer.
3. The air flow is too low.	<ul style="list-style-type: none"> The air filter is dirty. The doors or windows are open. The air suction and discharge are clogged. The regulated temperature is not high enough.
4. Discharge air flow has bad odor.	<ul style="list-style-type: none"> Odors may be caused by cigarettes, smoke particles, perfume etc, which might have adhered onto the coil.
5. Condensation on the front air grille of the indoor unit.	<ul style="list-style-type: none"> This is caused by air humidity after an extended long period of operation. The set temperature is too low, increase the temperature setting and operate the unit at high fan speed.
6. Water flowing out from the air conditioner unit.	<ul style="list-style-type: none"> Switch off unit and call dealer.

If the fault persists, please call your local dealer / serviceman.

The manufacturer reserves the right to revise any of the specification and design contain herein at any time without prior notification.

All images are for illustration purposes only.

安裝手冊

安全措施

閱讀後，請將本手冊放在方便取用的地方，以便在必要時可以參考...

警告 若不確實遵循這些指示，可能會導致人身傷害甚至死亡。

警告 若不確實遵循這些指示，可能會導致設備損壞或人身傷害，嚴重程度視情況而定。

- 切勿嘗試。務必閱讀說明書。切勿用手弄濕冷氣機或遙控器。切勿用直手觸摸冷氣機或遙控器。

警告 設備必須存放在沒有點火源持續運作的期間內(例如明火、運作中的燃氣設備或運作中的電子加熱器)。

- 請勿嘗試修理。請勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 冷氣機中使用的冷媒安全，應防止發生洩漏。但如發生洩漏由某種原因洩漏到室內，請確保其不會與燃氣加熱器、煤油加熱器或煤氣灶等的任何火焰接觸。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 務必將冷氣機接地。切勿將冷氣機接至公用電源、避震器或電話線。接地不當可能導致觸電。

注意

- 請注意，若長時間直接暴露在冷氣機的冷風或熱風下或大冷或大熱的空氣下，可能危害您的身體健康。切勿將冷氣機用於非指定用途。切勿使用冷氣機來冷卻設備櫃體、食物、植物、動物或藥品。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

- 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。


警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

警告 切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

遙控器概述

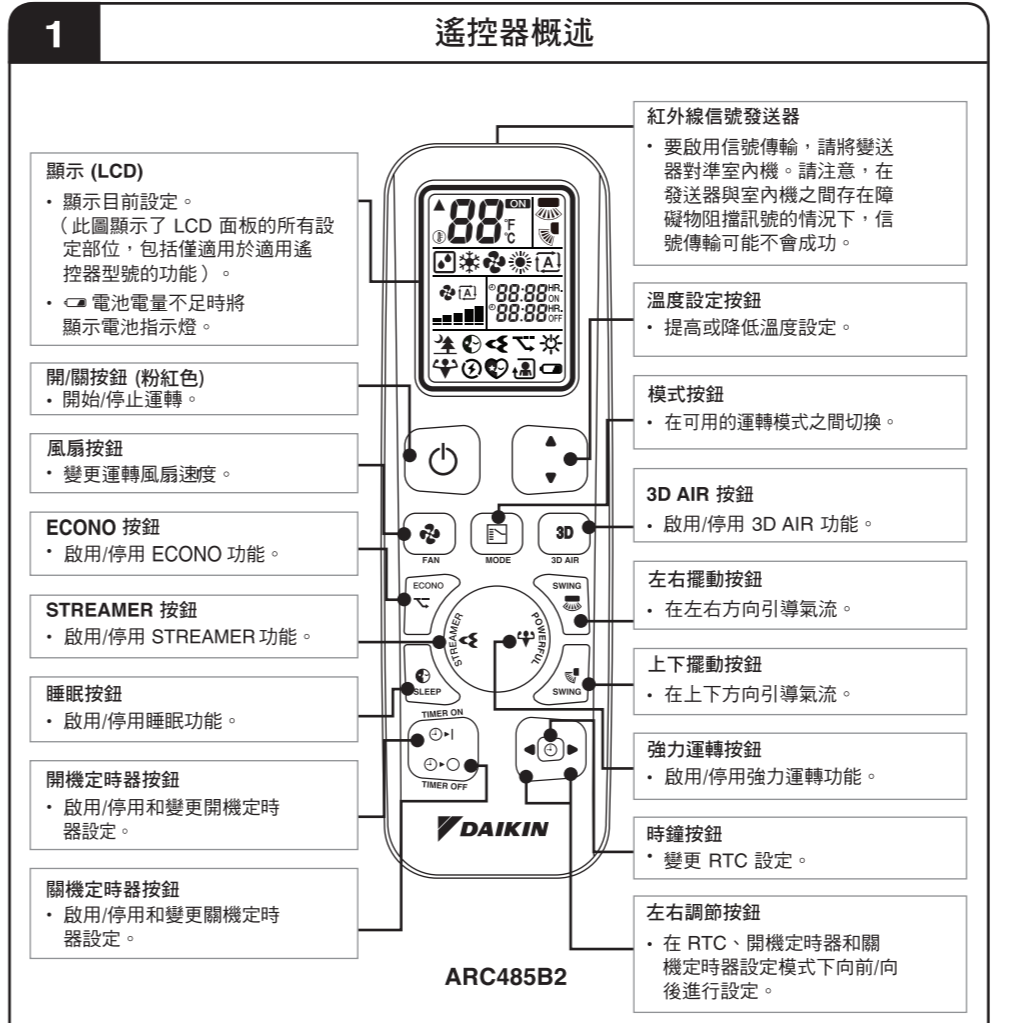

運轉前準備

- 附件 提供以下附件。乾濕螺絲 電池 遙控器托架

- 安裝要求 1. 打開遙控器背面的電池蓋。2. 裝入兩顆電池 (LR03-AAA)。3. 按照指示裝回電池蓋。

■ 關於遙控器 長時間不用冷氣機時，請將電池從遙控器中取出。

■ 關於遙控器 更換電池時，請使用兩顆同型電池，將舊電池一併更換。

■ 關於遙控器 請勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

■ 關於遙控器 請勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

■ 關於遙控器 請勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

■ 關於遙控器 請勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

■ 關於遙控器 請勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

操作前

無線連線設定

- 操作遙控器 將遙控器的發送器對準室內機的接收器。確保室內機和遙控器之間沒有障礙物且無干擾。

將遙控器托架固定在牆上

- 1. 選擇一個能夠將遙控器對準室內機的地方。

關於遙控器

切勿將遙控器靠近火源。切勿將遙控器靠近火源。切勿將遙控器靠近火源。

設定時鐘

- 1. 按 [] 按鈕。2. 按 [] 或 [] 按鈕以快速增加或減少時間顯示。

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

無線連線設定

- 簡單的無線連線設定 如果路由 (無線 LAN 存取點) 上有 [WPS] 按鈕，則設定更簡單。

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

按 [] 或 [] 按鈕以快速增加或減少時間顯示

1 製冷 ■ 除濕 ■ 送風 ■ 製熱 ■ 自動操作

- 啟動運轉 1. 按 [] 按鈕以啟動冷氣機運轉。

2 調節氣流方向

- 變更上下方向的氣流 1. 按 [] 按鈕。

3 3D AIR 運轉

- 啟動 3D AIR 運轉 1. 按 [] 按鈕。

4 變更溫度設定

- 4. 按 [] 按鈕。

5 變更風扇速度設定

- 5. 按 [] 按鈕。

4 ECONO 運轉

- 啟動 ECONO 運轉 1. 按 [] 按鈕。

5 睡眠運轉

- 啟動睡眠運轉 1. 按 [] 按鈕。

6 強力運轉

- 啟動強力運轉 1. 按 [] 按鈕。

7 STREAMER 操作

- 啟動 STREAMER 運轉 1. 按 [] 按鈕。

8 定時器運轉

- 使用開機定時器運轉

9 故障診斷

- 執行錯誤代碼診斷 1. 按 [] 或 [] 按鈕 5 秒。

錯誤代碼定義

Table with columns for error code and description.

8 定時器運轉

- 使用開機定時器運轉

■ 取消開機定時器運轉

- 關於取消開機定時器運轉

■ 關於取消開機定時器運轉

- 關於取消開機定時器運轉

保養與清潔

- 1. 打開前面板。2. 清潔前面板。

2 過濾網

- 1. 拉出過濾網。2. 用水沖洗空氣過濾網。

3 如何打開前面板

- 1. 打開前面板。2. 拉出過濾網。

■ 疑難排解

- 1. 啟動空調後風扇繼續運行超過 3 分鐘。

■ 疑難排解

- 1. 啟動空調後風扇繼續運行超過 3 分鐘。

保養與清潔

- 1. 打開前面板。2. 清潔前面板。

2 過濾網

- 1. 拉出過濾網。2. 用水沖洗空氣過濾網。

3 如何打開前面板

- 1. 打開前面板。2. 拉出過濾網。

■ 疑難排解

- 1. 啟動空調後風扇繼續運行超過 3 分鐘。

■ 疑難排解

- 1. 啟動空調後風扇繼續運行超過 3 分鐘。

保養與清潔

- 1. 打開前面板。2. 清潔前面板。

2 過濾網

- 1. 拉出過濾網。2. 用水沖洗空氣過濾網。

3 如何打開前面板

- 1. 打開前面板。2. 拉出過濾網。

■ 疑難排解

- 1. 啟動空調後風扇繼續運行超過 3 分鐘。

■ 疑難排解

- 1. 啟動空調後風扇繼續運行超過 3 分鐘。

保養與清潔

- 1. 打開前面板。2. 清潔前面板。

2 過濾網

- 1. 拉出過濾網。2. 用水沖洗空氣過濾網。

3 如何打開前面板

- 1. 打開前面板。2. 拉出過濾網。

■ 疑難排解

- 1. 啟動空調後風扇繼續運行超過 3 分鐘。

■ 疑難排解

- 1. 啟動空調後風扇繼續運行超過 3 分鐘。